





# **- Prazis Control System - User Guide**

# INTRODUCTION

- ◎ **Thanks for purchasing Prazis 4-way air management.**
- ◎ **The purpose of this user guide is to assist with the installation and to get to know the functions better.**
- ◎ **Please read the guide carefully before beginning operation.**
- ◎ **If you need any assistance regarding the control system, please contact [info@prazis-airsus.com](mailto:info@prazis-airsus.com)**

# MAIN CONTROLS

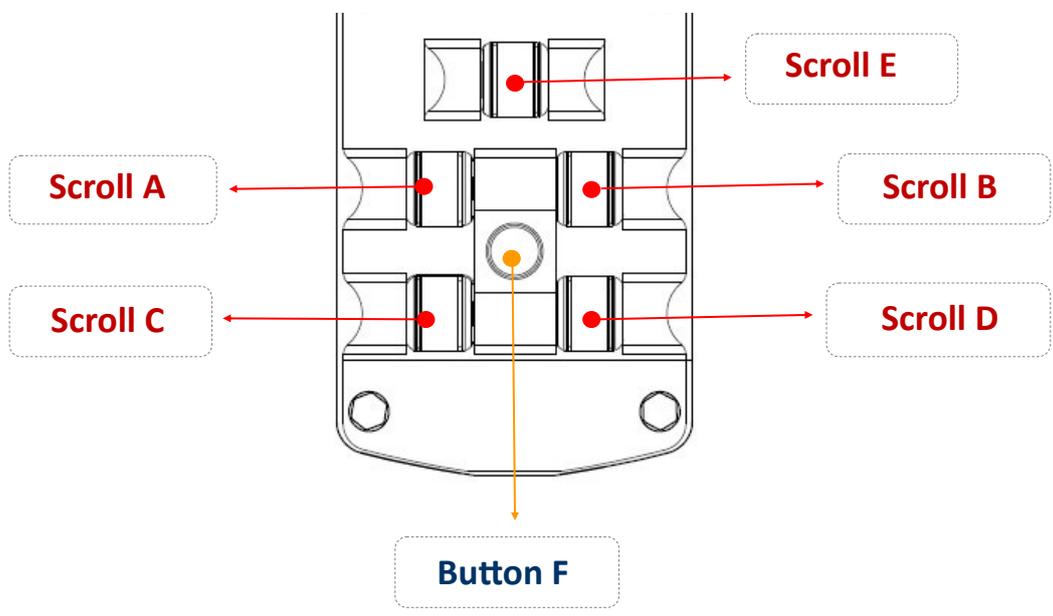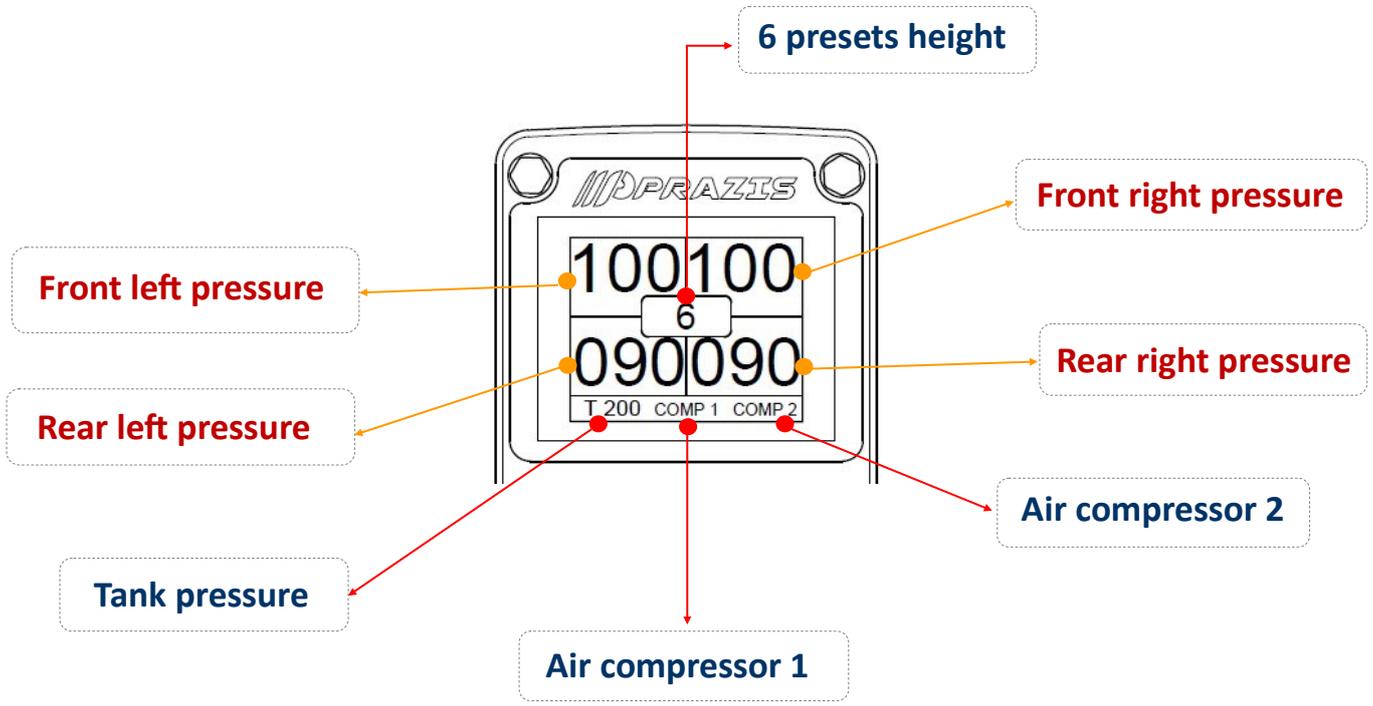

# SUB-CONTROLS



- ★ When the 6 presets of the main remote control are set, the wireless remote control will also automatically input all the setup. No additional setting is required.
- ★ The receiving distance of wireless remote controller is 5M~10M depending on where the antenna box is installed.

# FUNCTION SETTING

- ★ Holding “button F” for five seconds to get to the function setting menu.
- ★ After getting to the setting menu, scroll “E” to adjust the value. Press “E” again to next option. When setup is completed, press “F” to next function menu.

## COMPRESSOR ON / OFF

### ⦿ **Set the compressor ON / OFF pressure value.**

1. Enable compressor: 100~150 PSI
2. Disable compressor: 160~200 PSI

## ACC ON

### ⦿ **When ACC ON, the car will go up to the set height.**

1. OFF
2. MEM – 1 / 2 / 3 / 4 / 5 / 6

# COMPRESSOR QTY

## ☉ Control the compressor(s) manually.

1. Use Compressor No. 1
2. Use Compressor No. 2
3. Enable dual compressors
4. Disable dual compressors

# MIN. BATTERY VOLTAGE

## ☉ Set the minimum battery voltage to allow the compressor(s) to turn on.

1. DC 12V
2. DC 13V
3. DC 14V
4. OFF

- ★ After setup is completed, press “button F” once to back to the original value page.  
( displaying current pressure value of each wheel, tank pressure or current memorized pressure value )

# BRIGHTNESS

## ☉ **Set the brightness for the display while using.**

- ★ Press “ button F “ twice to increase / decrease luminosity.

# RIDE HEIGHT ADJUSTMENT & MEMORY SETTING

- ★ Scroll up to increase the airbag pressure and scroll down to decrease the airbag pressure. After adjusting to the desired pressure, press the scroll and ECU will execute to the set value.
- ★ There are 6 presets of ride height memories for your options.
- ★ Memory height setting method : When four pcs of air bags are adjusted to the desired height, scrolling “E” to the desired memory position ( Mem. 1 / 2 / 3 / 4 / 5 / 6 ) and holding for 5 seconds to complete the memory setting.
- ★ 2-wheel / 4-wheel mode switch : To get to the manual mode first. ( press either A / B / C / D twice. ) ( When memory position is disappeared, it’s the manual mode. ) In manual mode, press “button F” twice, will get to 2-wheel / 4-wheel switch menu in 2 seconds.



# ABOUT WARRANTY

## ■ Warranty period :

- \* One-year warranty from the date of purchase.

## ■ Our warranty range :

- \* Leaking struts : new replacement.
- \* Air bags with damage : new replacement.
- \* Air compressor : replace a new part with damaged part or return back for repair.
- \* Management : replace a new part with damaged part or return back for repair.
- \* Remote control : replace a new part with damaged part or return back for repair.

## ■ No warranty when :

- \* The warranty does not apply to products which are not Prazis standard specification to cause damage or leakage.
- \* Incorrectly use, improperly installed or have not been assembled in accordance with installation instructions enclosed.
- \* Corrosive liquid contact, accident or nature disaster...etc.
- \* Misuse / abuse / Human negligence to cause appearance damage.
- \* Doing repair, modification, disassembly and Assembly without the permission of authorized people of headquarter.
- \* Parallel-imported products (Products which are not shipped through Taiwan headquarter or local authorized agents or dealers).
- \* The QR code is torn or damaged.
- \* The product is not under warranty if the product is not our standard setup.

## ■ Note :

- \* All the replacement parts will be shipped with buyer's other orders, the seller will not cover the shipping cost.

# CONTACT INFORMATION

■ **Shipping address for returns :**

No.421, Sec. 3, Xinping Rd., Taiping Dist., Taichung City 411, Taiwan

■ **Service number :**

+886 4 23960736

■ **Fax number :**

+886 4 23960756

■ **Email us :**

[info@prazis-airsus.com](mailto:info@prazis-airsus.com)

■ **Website :**

[www.prazis-airsus.com](http://www.prazis-airsus.com)

■ **Note :** In the following situations, please contact the retailer where the kit was purchased.

- \* About warranty
- \* About shipment
- \* About price
- \* About installation



WEB: [WWW.PRAZIS-AIRSUS.COM](http://WWW.PRAZIS-AIRSUS.COM)

EMAIL: [INFO@PRAZIS-AIRSUS.COM](mailto:INFO@PRAZIS-AIRSUS.COM)

TEL: +886 4 2396-0736







## - Prazis 控制系統 -

### 使用者指南

# 主要按鍵說明

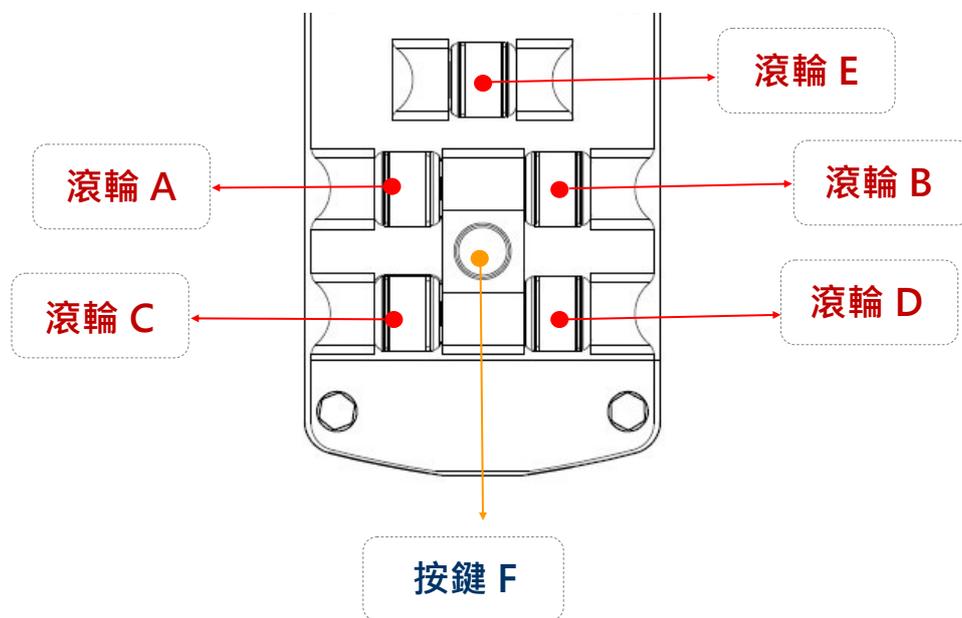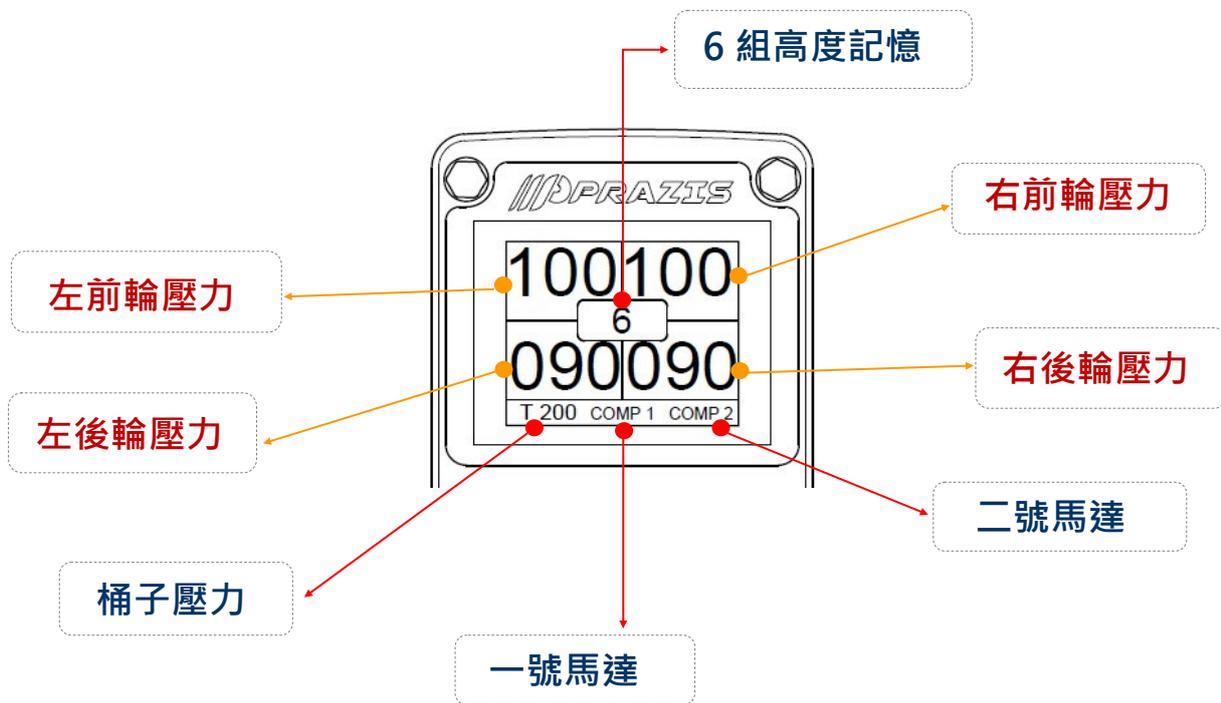

## 次要按鍵說明



- ★ 當主遙控器的六組記憶都設定完成後，無線遙控器的六組設定也會自動輸入，不需額外自行設定。
- ★ 無線遙控器接收距離為 5 公尺~10 公尺取決於天線盒安裝的位置。

## 功能說明

- ★ 按住 " F " 五秒後進入功能設定選單
- ★ 進入設定選單後，滾動 " E " 來調整數值。再按一次 " E " 至下一個選項。
- ★ 當設定完成後，按一下 " F " 至下一個功能選單。

## 馬達 開啟/關閉

### ◎ 設定馬達開啟 / 關閉的壓力值

1. 馬達開啟：100~150 PSI
2. 馬達關閉：160~200 PSI

## ACC ON

### ◎ 當 ACC ON 時，車子會自動升高至已設定之高度

1. OFF
2. MEM – 1/2/3/4/5/6

## 馬達數量設定

### ◎ 手動控制馬達數量

1. 使用馬達一號
2. 使用馬達二號
3. 啟用兩顆馬達
4. 停用兩顆馬達

## 最低電池電壓

### ◎ 設定最低電壓，以允許馬達開啟

1. DC 12V
2. DC 13V
3. DC 14V
4. OFF

★ 設定完成後，按一下 "F"，返回到原始值頁面。（顯示每個車輪的當前壓力值，桶子壓力或當前存儲的壓力值）

## 螢幕亮度調整


◎ 在使用時，調整螢幕亮度

- ★ 按壓 " 按鍵 F " 兩次來調亮 / 調暗螢幕

## 高度調整&記憶設定

- ★ 向上滾動增加皮球壓力，向下滾動減少皮球壓力。調整至所需壓力後，按一下滾輪，ECU 將執行至設定值。
- ★ 備有六組記憶高度設定可供選擇。
- ★ 記憶設定方式：當四顆皮球都調整至所希望的高度後，滾動 " E 鍵 " 至想要的記憶位置時，按壓滾輪，ECU 即可立刻調整。
- ★ 二輪 / 四輪切換：先進入手動模式 (按壓任一 A/B/C/D 鍵兩次，當記憶鍵不見，即為手動模式)；在手動模式下，連續按壓 " 按鍵 F " 兩次，(兩秒內) 進入二輪 / 四輪切換。

# P4W 線路安裝指南

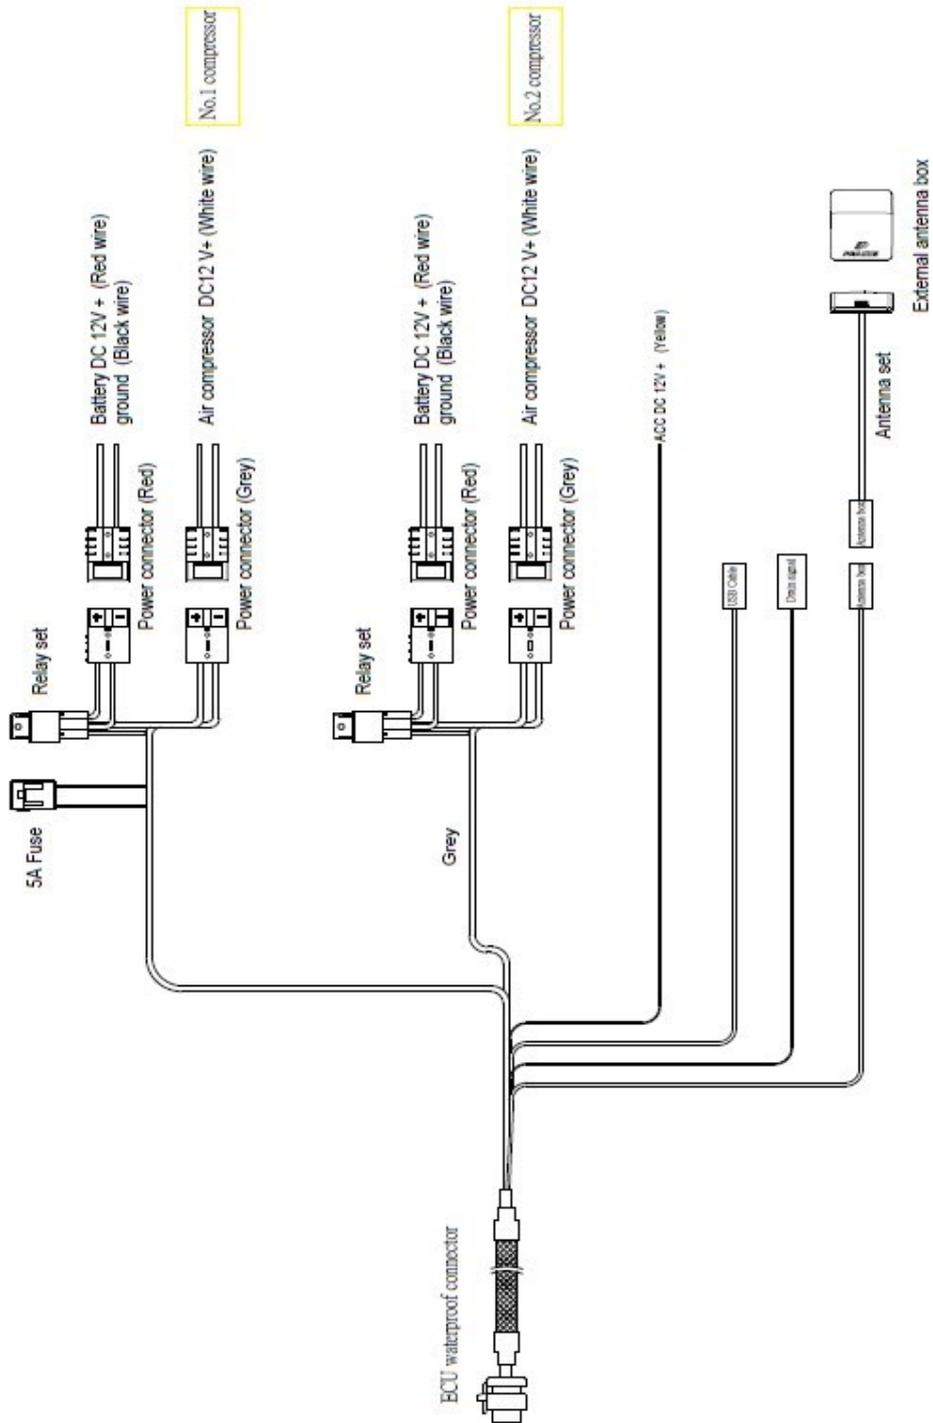

# 保固之注意事項

## ■ 保固期間：

自購買日起一年保固。

## ■ 保固範圍如下：

- \* 桶芯漏油：保固乙支新桶芯。
- \* 皮球漏氣：保固乙顆新皮球。
- \* 馬達：故障零件 – 提供零件替換或寄回總公司維修。
- \* 系統：故障零件 – 提供零件替換或寄回總公司維修。
- \* 遙控器：故障零件 – 提供零件替換或寄回總公司維修。

## ■ 以下情況不提供保固：

- \* 組裝時，未使用 PRAZIS 原廠零件而導致損壞、漏氣等。
- \* 未正確使用、安裝不當或未按照隨附的安裝說明書進行組裝。
- \* 接觸易侵蝕性液體、意外、天災等事故。
- \* 錯誤使用/濫用/使用上過失，導致外觀損傷。
- \* 未經本公司授權之人員所進行之維修、修改、拆裝。
- \* 平行輸入產品(水貨，非經由台灣總公司或當地授權之代理、經銷商出貨之產品)。
- \* 當 QR CODE 保固貼紙被撕掉或損毀，則保固無效。

## ■ 注意事項：

- \* 所有更換之保固零件，將與買方的其他訂單一起發貨，賣方將不承擔運費。
- \* 若產品非本公司出貨時的標準設定，以至於造成故障或損壞，則不提供保固。

## 聯絡資訊

■ 退貨或維修品的寄送地址：

台灣,台中市太平區新平路三段 421 號

■ 客戶服務號碼：

(04) 2396-0736

■ 傳真號碼：

(04) 2396-0756

■ 電子郵件：

[info@prazis-airsus.com](mailto:info@prazis-airsus.com)

■ 網站：

[www.prazis-airsus.com](http://www.prazis-airsus.com)

■ 注意事項：遇到以下情況,請優先聯繫您購買產品的店家

\* 保固問題

\* 出貨問題

\* 售價問題

\* 安裝問題



WEB : [WWW.PRAZIS-AIRSUS.COM](http://WWW.PRAZIS-AIRSUS.COM)

EMAIL : [INFO@PRAZIS-AIRSUS.COM](mailto:INFO@PRAZIS-AIRSUS.COM)

TEL : +886 4 2396-0736







## - Prazis 制御システム -

ユーザーガイド

## 前書き

- ◎ Prazis 4-ウェイエアマネージメントをご購入いただきありがとうございます。
- ◎ このユーザーガイドの目的は、インストールを支援し、機能をよりよく理解することです。
- ◎ ご使用前に必ずお読みください。
- ◎ 制御システムに関して支援が必要な場合は、[info @ prazis-airbus.com](mailto:info@prazis-airbus.com)までご連絡ください。

# メインボタンの説明

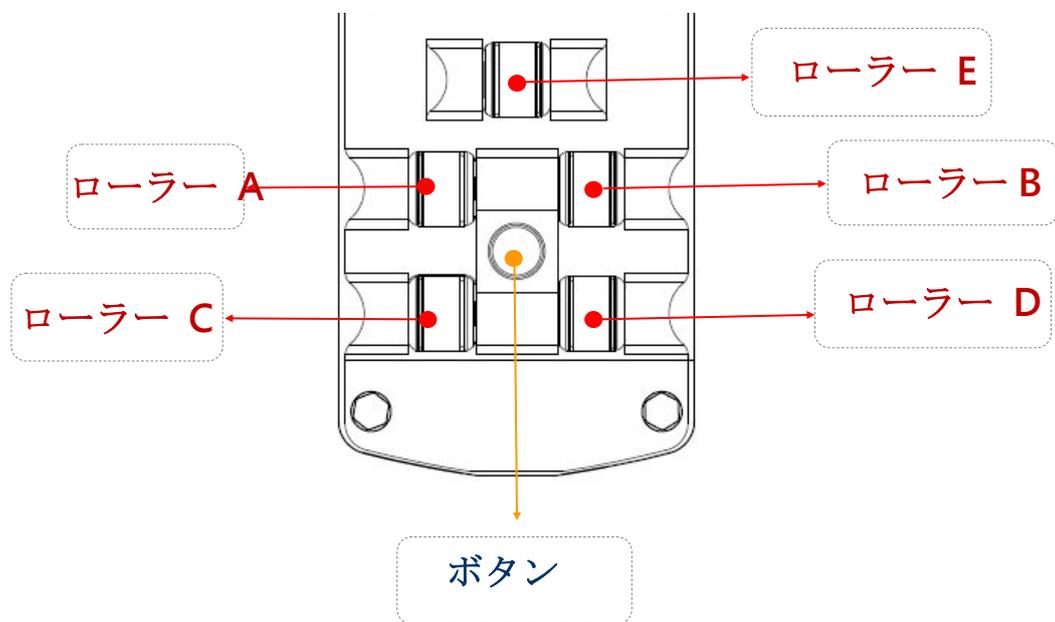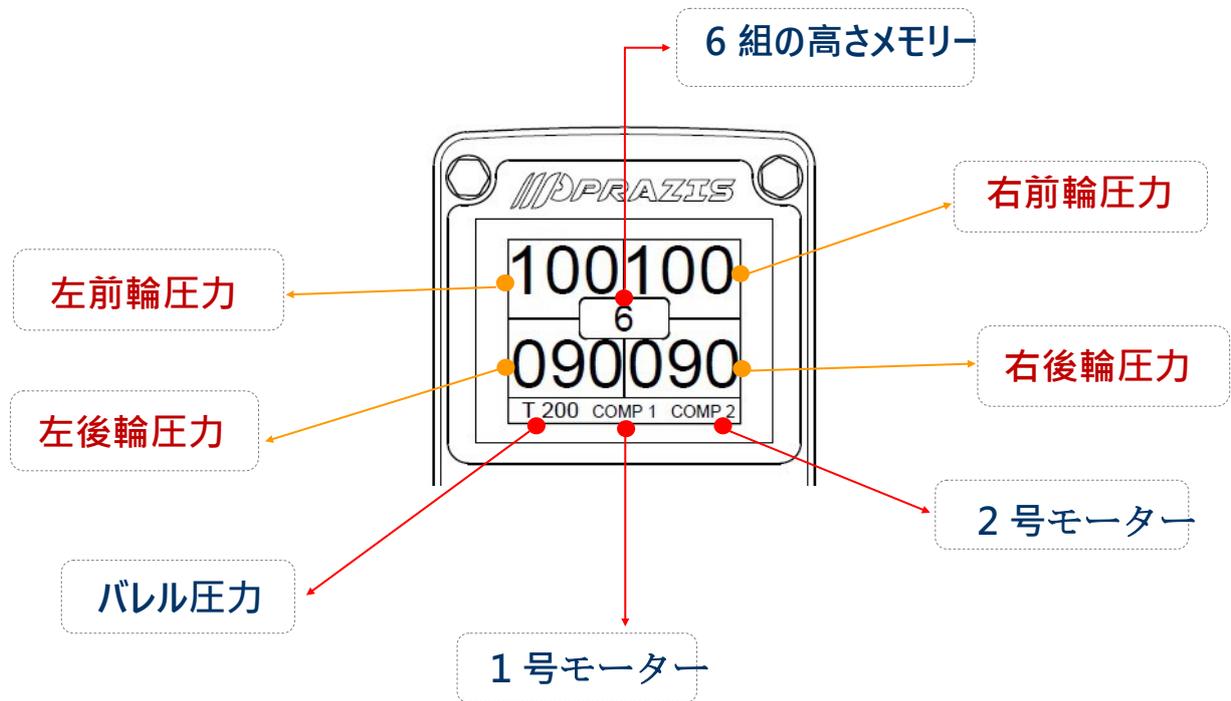

## サブボタンの説明



- ★ メインリモコンの6組のメモリー全ての設定が終わると、ワイヤレスリモコンの6組の設定も自動的に入力され、自分で設定する必要はありません。
- ★ ワイヤレスリモコンの到達距離はアンテナボックスの取付位置に左右され、およそ5～10メートルです。

## 機能の設定

- ★ " F " を 5 秒押し続けると機能設定オプションへ入れます。
- ★ 設定オプションへ入り、" E " を回して数値を調整します。次に 1 回 " E " を押すと次のオプションへ入れます。
- ★ 設定完了後、" F " を押すと次の機能オプションへ入れます。

## モーター **ON / OFF**

### ◎ モーター ON / OFF の圧力値の設定

1. モーター ON : 100 ~ 150 PSI
2. モーター OFF : 160 ~ 200 PSI

## ACC ON

### ◎ ACC ON の時、車は自動的に設定高さまで上昇します

1. OFF
2. MEM - 1/2/3/4/5/6

## モーター数量の設定

### ◎ 手動制御のモーター数量

1. 1号モーターを使用
2. 2号モーターを使用
3. 2つのモーターをスタート
4. 2つのモーターをストップ

## バッテリーの最低電圧

### ◎ モーターを ON にするための最低電圧を設定

1. DC 12V
2. DC 13V
3. DC 14V
4. OFF

★ 設定完了後、" F "を押すと初期値のページへ戻ります。(各タイヤの現在の圧力値、バルル圧力或いは現在保存している圧力値を表示します)

## ディスプレイの明るさ調整


### ◎ 使用時のディスプレイの明るさを調整

- ★ “ボタンF”を2回押してディスプレイの明/暗を調整

## 高さ調整 & メモリーの設定

- ★ 上方向に回すとベースバルブの圧力が増し、下方向へ回すとベースバルブの圧力が減ります。必要な圧力に調整後、ローラーを押すと、ECUが設定値まで実行します。
- ★ 6組の高さメモリーが選択できる設定を提供。
- ★ メモリーの設定方法：4つのベースバルブを希望の高さに調整後、“Eボタン”を希望のメモリー位置まで回して、ローラーを押すと、ECUが直ちに調整します。
- ★ 二輪 / 四輪の切り替え：まず手動モード (A/B/C/D ボタンのどれか1つを2回押し、メモリーボタンが消えると手動モード) にします。手動モード下で、“Fボタン”を続けて2回(2秒以内に)押すと二輪 / 四輪の切り替えに入れます。

# P4W 配線取付ガイド

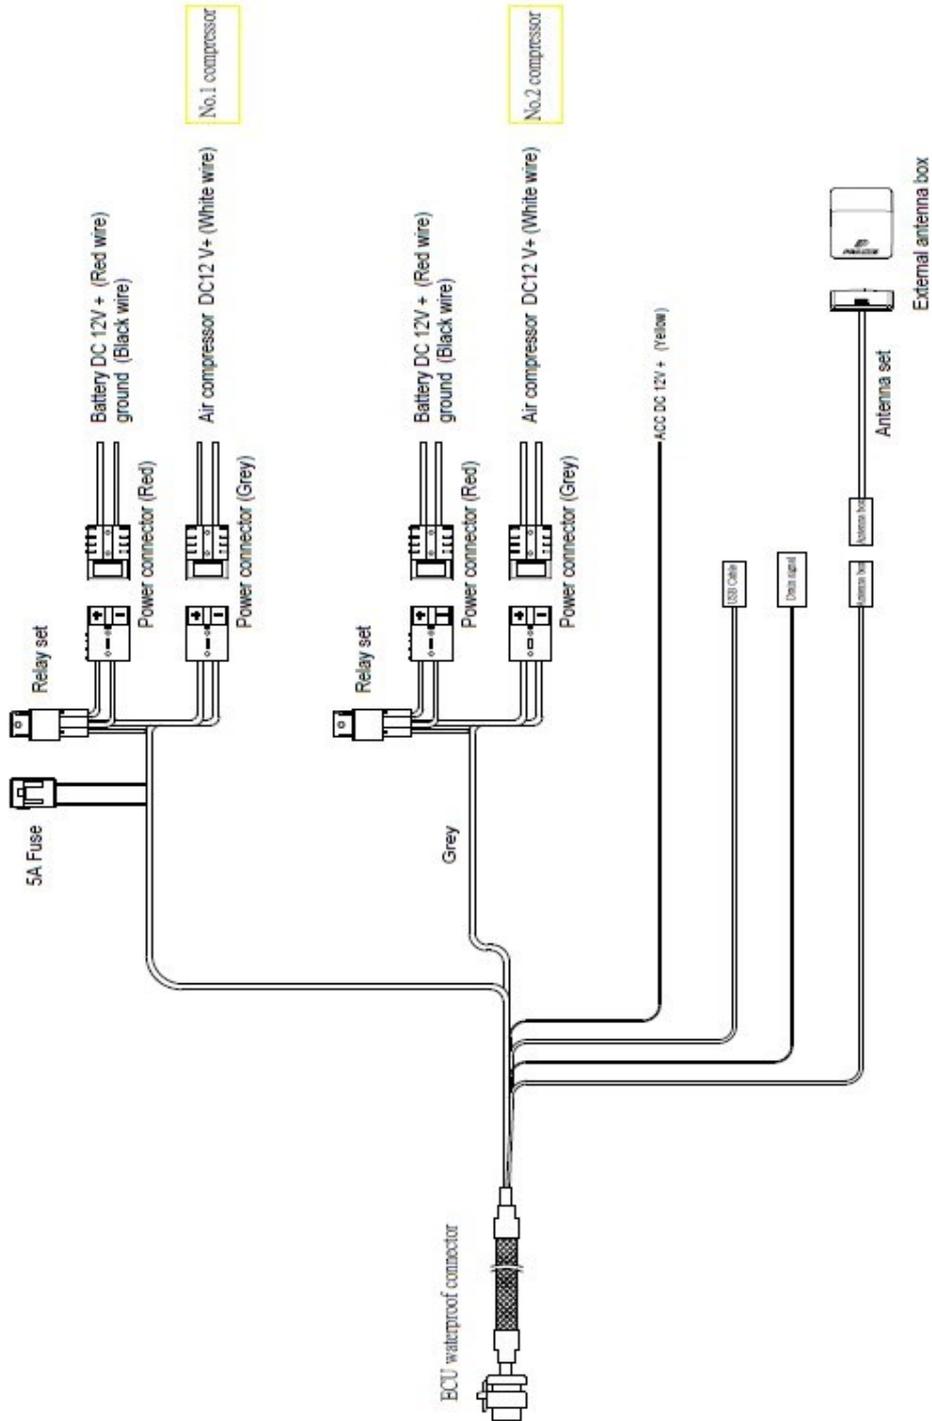

# 保証サービスの注意事項

## ■ 保証サービス期間：

- \* 購入日より一年間保証。

## ■ 保証サービスの範囲は次の通り：

- \* ピストンロッドのオイル漏れ：新品のピストンロッドを1本提供。
- \* ベースバルブのエア漏れ：新品のベースバルブを1個提供。
- \* モーター：部品の故障 - 部品の交換または本社への返送修理を提供。
- \* システム：部品の故障 - 部品の交換または本社への返送修理を提供。
- \* リモコン：部品の故障 - 部品の交換または本社への返送修理を提供。

## ■ 次のような状況では保証サービスを提供することができません：

- \* 組立時に PRAZIS の製造元部品を使用しなかったためにもたらされた破損やエア漏れ等。
- \* 不正確な使用や不適切な取り付け、或いは添付の取付説明書通りに組み立てなかった。
- \* 腐食性液体との接触、事故、天災等。
- \* 誤用/乱用/使用上の過失によって起きた外観の損傷。
- \* 当社の委託を受けていない人員によって行われた保守、修理、分解。
- \* 平行輸入製品(密輸品、台湾本社或いは現地の授権代理、販売店を経ずに出荷された製品)。
- \* QR CODE の保証サービスシールがはがれたり、破損していると保証サービスは無効となります。

## ■ 注意事項：

- \* 保証サービスの交換部品は全て買い手(お客様)のその他注文品と一緒に出荷し、ベンダーは送料を負担いたしません。
- \* 弊社出荷時の標準設定でない製品により、故障や破損がもたらされた場合、保証サービスを提供することができません。

## 連絡時の情報

■ 返品や修理品を送る際の住所：

台湾,台中市太平区新平路三段 421 号

■ カスタマーサービスの電話番号：

(04) 2396-0736

■ ファクシミリ：

(04) 2396-0756

■ 電子メール：

[info@prazis-airbus.com](mailto:info@prazis-airbus.com)

■ ウェブサイト：

[www.prazis-airbus.com](http://www.prazis-airbus.com)

■ 注意事項： 次のような状況の場合、まずは製品を購入したショップまでご連絡ください

\* 保証サービスの問題

\* 出荷の問題

\* 販売価格の問題

\* 取り付けの問題



WEB : [WWW.PRAZIS-AIRSUS.COM](http://WWW.PRAZIS-AIRSUS.COM)

EMAIL : [INFO@PRAZIS-AIRSUS.COM](mailto:INFO@PRAZIS-AIRSUS.COM)

TEL : +886 4 2396-0736

